




Specialty Guitars, LLC

TELECASTER WIRING DIAGRAM – 4 WAY SWITCH

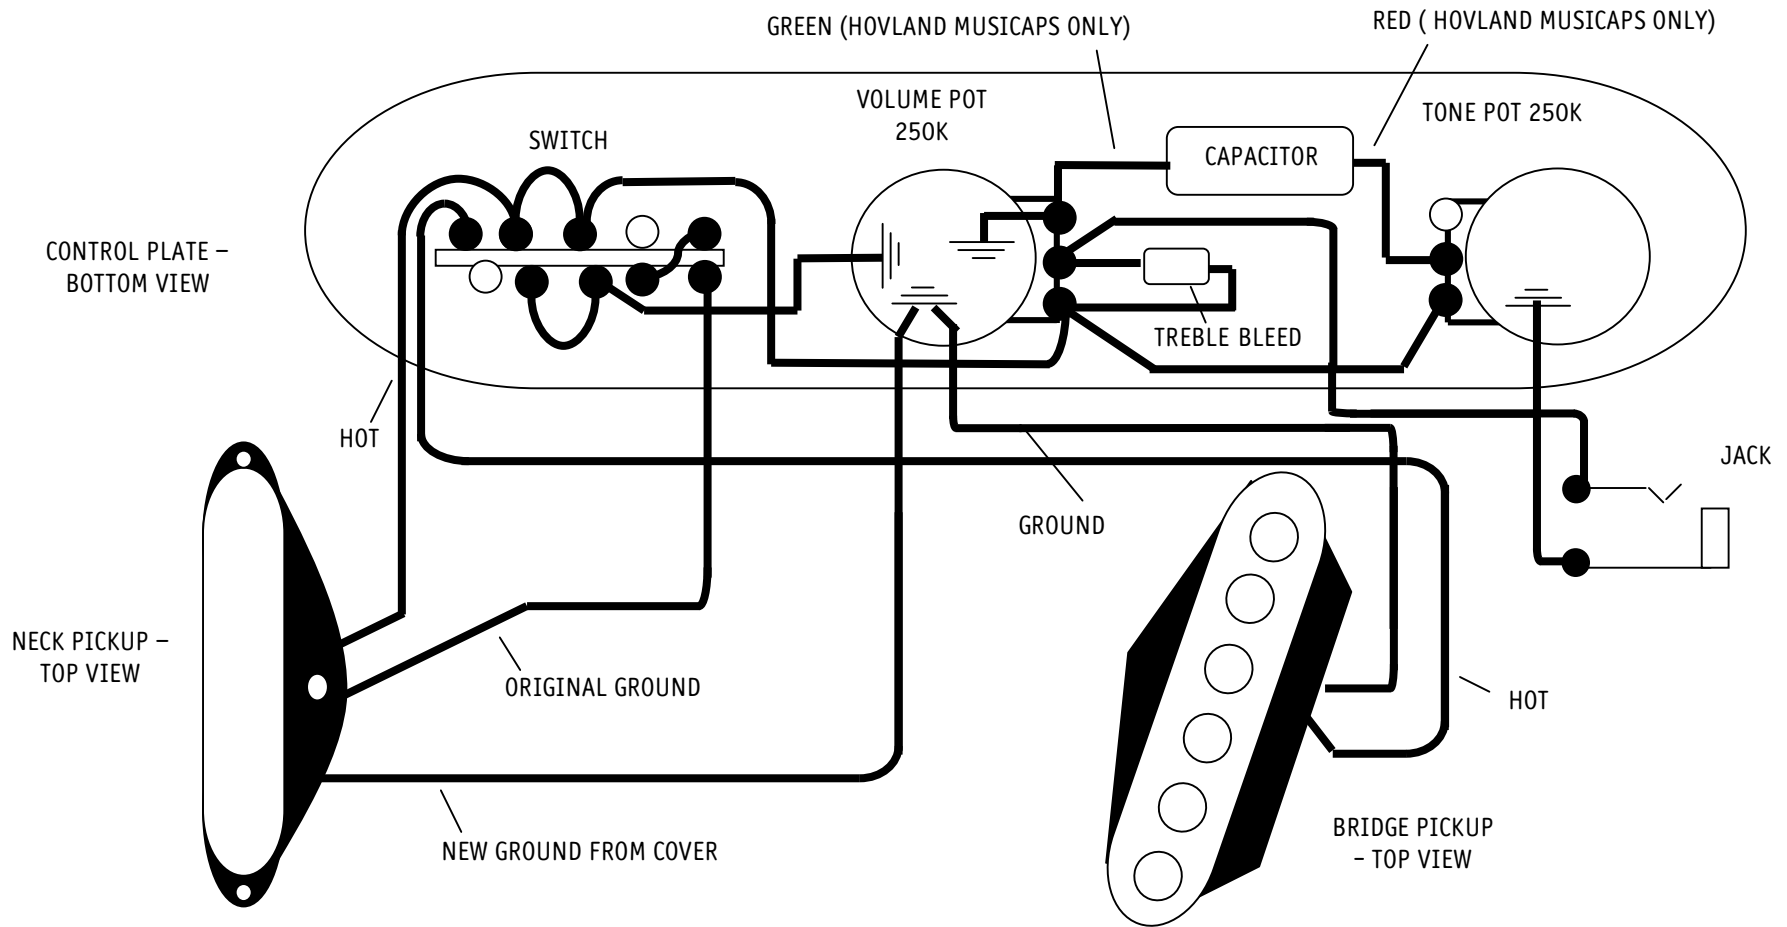

IF YOUR PICKUP HAS A COVER, YOU MUST LIFT THE EXISTING GROUND AND ADD AN ADDITIONAL GROUND WIRE.

ON THE BASE OF THE PICKUP, LOCATE THE COVER TAB THAT IS NEAR THE SOLDER CONNECTIONS FOR THE BLACK AND WHITE WIRES. YOU SHOULD SEE A SHORT JUMPER WIRE CONNECTING THIS TAB TO THE BLACK WIRE, AND GROUNDING THE COVER. YOU WILL NEED TO BREAK THIS CONNECTION. TO RE-GROUND THE PICKUP COVER, SOLDER A 10" – 12" LENGTH OF WIRE TO THE TAB. SOLDER THIS NEW GROUND WIRE TO THE BACK OF THE VOLUME POT.

TREBLE BLEED CAP IS OPTIONAL.

© 2005 *Specialty Guitars, LLC*

www.specialtyguitars.com